

MEDISTEEL

Shelf



AI0720C
Bright finish



AI0720CS
Satin finish

General Description

- Bathroom shelf, bright or satin finishes and made in stainless steel AISI 304, for wall mounting.
- The stainless steel AISI 304 construction protects the product against rust and ensures quality and longevity.
- Model suitable for the hotel sector and for collectivities.
- Concealed screws design.


Technical Specifications

General dimensions	52 x 525 x 161mm
Shelf thickness	0.8 mm
Flanges and support arms thickness	0.8 mm
Wall plate thickness	0.8 mm

Components & materials

- AI0720C:** AISI 304 stainless steel, bright finish.
- AI0720CS:** AISI 304 stainless steel, satin finish.
- SHELF:** made in a solid stainless steel AISI 304 plate, 0.8 mm thick with roll-formed edges.
- FLANGE AND POST:** 2 units made in stainless steel AISI 304, 0.8 mm thick. Each flange has a concealed 1.6 mm stainless steel mounting bracket. All-welded construction. A stainless steel lock screw, at the bottom perimeter of flange, is used to lock the unit to the wall mounting plate. The mounting plate is secured to wall with two provided stainless steel screws.
- Screws and plugs for installation to the wall are provided.

Dimensions

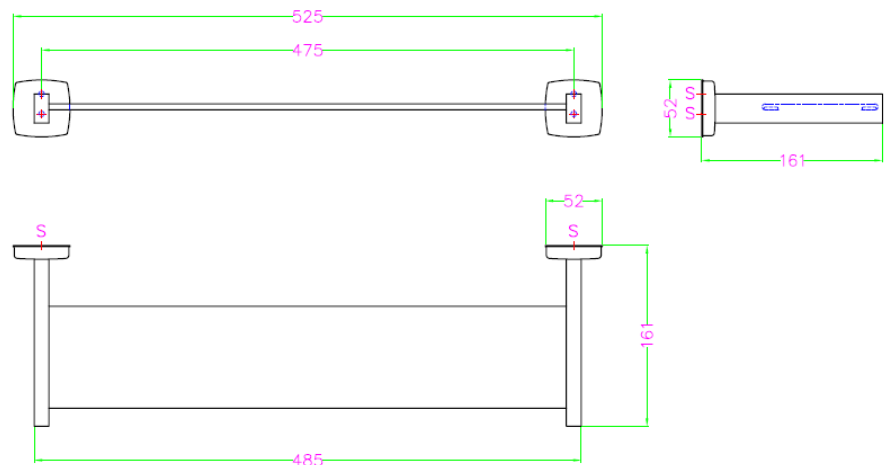

Dimensions: ±4%

MOUNTING

Fix the wall mounting plates on the wall using the provided screws through the mounting plate holes (points indicated by an "S" in the upper figure).

Hang post and flange assembly on mounting plate and tighten the lock screw to lock unit to plate.

